

Bluetooth®





Bluetooth* VT-6211

been dropped.

Description of Parts

LED Light

LED Indicator

Auxiliary Port

Charging Port

Built-in Microphone

LED Light Button

LED Light Increase Button

LED Light Decrease Button



· Unplug this apparatus during lightning storms or when unused for long periods of

• Refer all servicing to qualified service personnel. Servicing is required when the

apparatus has been damaged in any way, such as power-supply cord or plug is

apparatus has been exposed to rain or moisture, does not operate normally, or has

damaged, liquid has been spilled or objects have fallen into the apparatus, the

Bluetooth* VT-6211



Bluetooth



WEEE Number: 80133970

WIRELESS SPEAKER WITH FLAME EFFECT





INTRODUCTION

Thank you for selecting and buying V-TAC Product. V-TAC will serve you the best. Please read these instructions carefully & keep this user manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best.

(Getting Started)

- Remove the speaker from the box.
- · Please retain all packaging until after you have checked and counted all the parts and the contents against the Package Contents list.

Package Contents

- Speaker (1PC)
- USB Cable (1PC)
- Auxiliary cable (1PC) • Instruction Manual (1PC)

(Key Features)

- Bluetooth light-up speaker
- Connect & stream wireless music anytime, anywhere
- Bright LED lights sets your mood while listening to music
- Switch between 6 pre-set light levels
- Built-in microphone for hands-free calls
- Built-in rechargeable battery
- Built-in aux iack

SAFETY INSTRUCTIONS

- Read these instructions.
- · Keep these instructions.
- · Heed all warnings. Follow all instructions

Function

Increase

Volume

Decrease

Volume

Pause

Play

Next track

device.)

. Turn ON the speaker

button to decrease the volume.

- Do not use this apparatus near water.
- · Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- · Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the

Press and hold the + button to increase the

Press and hold the - button to decrease the

Short press the Play/Pause button will pause the

Short press the Play/Pause button will resume

Short press the Skip Backward button will return

Short press the Skip Forward button will take





Bluetooth* VT-6211

V-TAC

Bluetooth



this device.

below functions

Function

Incoming Cal

Answer

End Call

Volume

Increase

Volume

Redial

Decrease

last number



• Search for available Bluetooth devices and you would find "SKU-7724" - Pair it with

• Once paired successfully, you will hear another indication tone, and blue LED will

You can now stream wireless music on your speaker through your source device.

Please ensure that your cell phone is paired with the Bluetooth Speaker to use the

Press the Phone button once to answer an

After your phone conversation, short press the Phone button

Long press on the + button will increase the

Long press on the - button will decrease the

Short press the Phone button twice

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with

the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from

Button

• If required, enter the password "0000" to pair with the device.

Talking using the Bluetooth Speaker

Operation

coming Call

ncoming Call

During a call

During a call

Standby mode

and connected to a device

Listening to Music Wirelessly





Button

the music

you to the previous track

you to the next track

(Note: The above functions only can be used in Bluetooth mode only. An indication

besides the volume increase/decrease, you will need to control through your source

• Insert one end of the Auxiliary cable (included) into the Auxiliary port, and the other end to the audio device (such as phone / MP3 Player / computer / tablet /etc.).

• Long press Volume Increase button to increase the volume or Volume Decrease

Note: Play, Pause, Skip Forward, Skip Backward etc can only be controlled through

tone will alert you when the volume is adjusted to maximum level. In Aux mode,

- Bluetooth®
- (LED Lights)

4

6

9

10

11

- the brightness.

Tips!!

When the speaker is not in use, turn it OFF in order to save the battery power.

- Bluetooth® Version: 5.0
- Wireless Streaming Range Distance: 10 meter
- Charging Time: 3 4 hours
- Play time: 2 hours with light on (moderate volume)
- Built-In Rechargeable Battery: 3.7V / 1200mAh

connected & wireless distance.)

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
	Battery dead	Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all	Source (Tablet, Mobile Phone, Laptop.) turned off.	Turn the source on.
	Speaker turned off.	Turn the speaker on.
	Volume turned down source.	Adjust volume source.
	Media paused on source.	Play media from source

INSTRUCTIONS FOR USE

Charging the speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn OFF automatically. Please recharge the battery every time it drains out.

Plug the Micro USB end of the included USB charging cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged.

It takes 3 - 4 hours to fully charge the speaker. Once the speaker is fully charged, LED Light would turn OFF.

It is recommended to fully charge the speaker before its first use.

Turning ON/OFF the Speaker –

Before Turning ON the speaker, please ensure that it is fully charged. Press and hold the ON/OFF button for 2-3 seconds to turn on/off the unit.

TWS function

It is possible to use two copies of this speaker, paired together, to benefit from a

To do this,turn on both speakers,then press the \P button on one of them once. The two speaker will connect to each other.

You can then pair your device with the stereo unit by following the procedure below. Ensure that both speakers are spaced less than 10 meters

Connect using Bluetooth Technology

- Press and hold the ON/OFF button to for 2-3 seconds to turn on the unit. You would hear an indication tone, and blue LED flashes rapidly indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet). Please refer to manufacturer's instructions for instructions on enabling Bluetooth on







Operation

Playing music

Playing music

Plaving music

Playing music

Play music through "Auxiliary" mode

 
Select your favourite song at the source device to play.

Pausing

Previous track | Playing music

cart/apparatus combination to avoid injury from tip-over.





Skip Forward /Volume Increase + Button

ON/OFF/ Play/Pause/Phone /TWS Button

Skip Backward /Volume Decrease - Button

· Turn ON the speaker. • Short press the LED Light Button to turn on/off the LED lights. • Short press the LED Light Increase/Decrease Button each time to increase/decrease

Specifications

- Speaker output: 2x3W
- Unit Size: 88.3 x 88.3 x 204 mm
- Power Input: DC 5V

(Note: Battery life & charging time may vary based on usage, types of devices

Troubleshooting

Care and maintenance

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Don't expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit
- Don't expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- · Don't attempt to disassemble the unit as it may get damaged if you are not professional.

IN CASE OF ANY QUERY/ISSUE WITH THE PRODUCT, PLEASE REACH OUT TO US AT:

FOR MORE PRODUCTS RANGE, INQUIRY PLEASE CONTACT OUR DISTRIBUTOR OR NEAREST DEALERS. V-TAC EUROPE LTD. BULGARIA, PLOVDIV 4000, BUL.L.KARAVELOW 9B

your device. the source devices, while playing music in Auxiliary mode.